

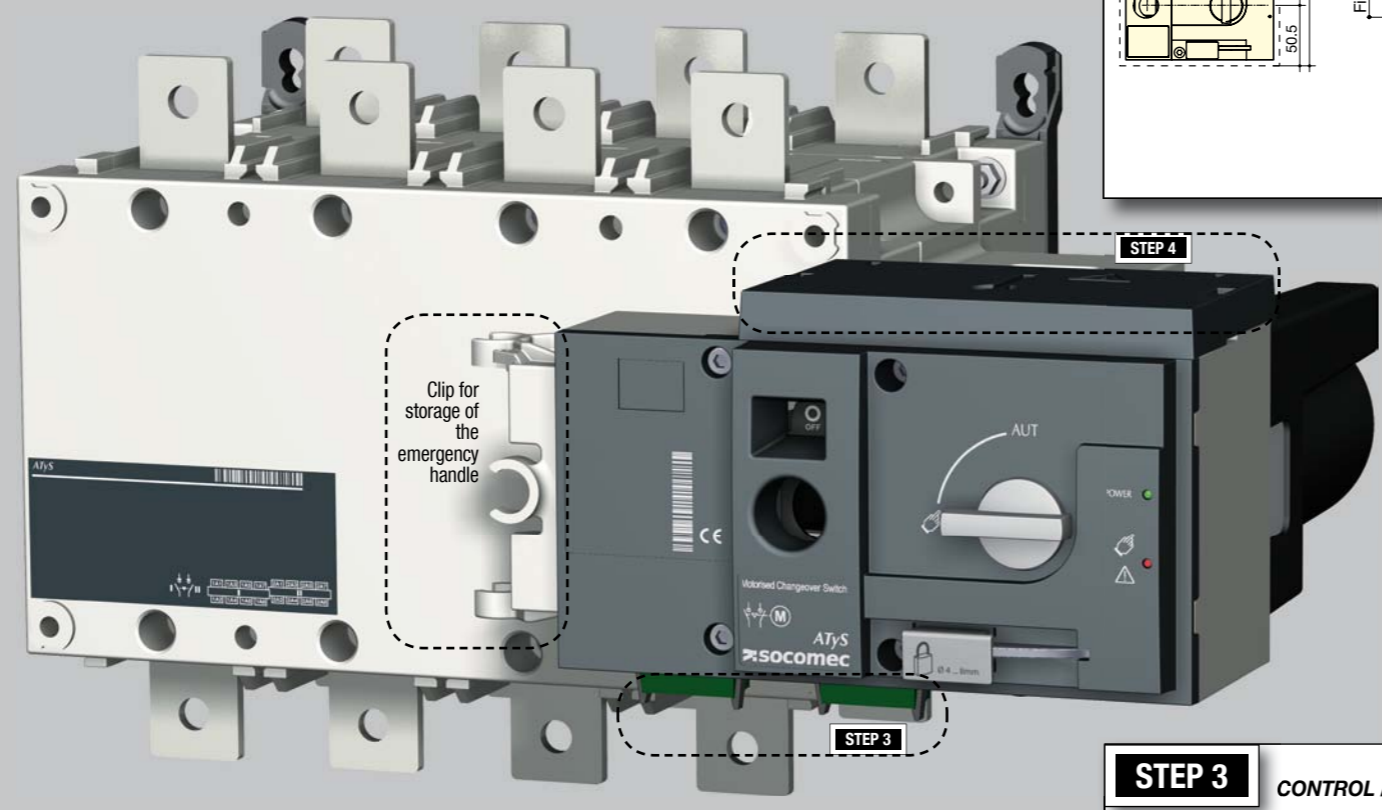
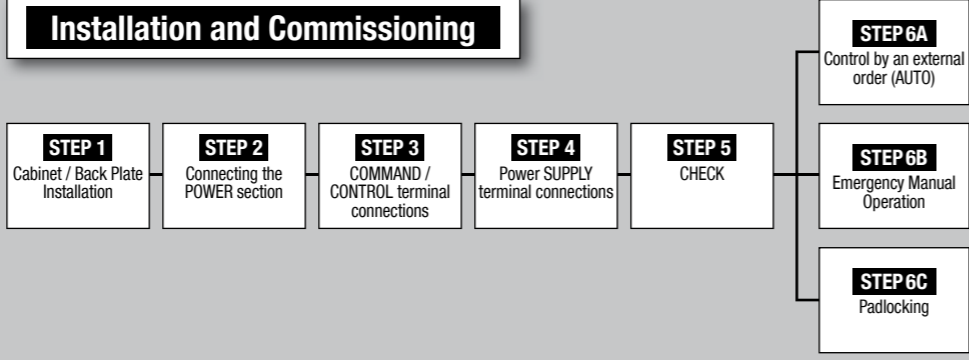


Installation and Commissioning

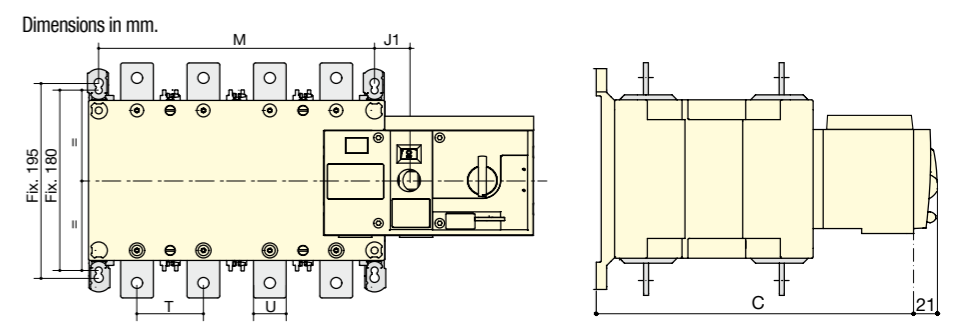

STEP 1 Installation

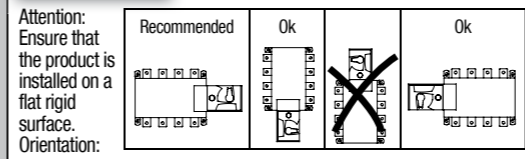

	125 A		160 A		200 A		250 A		315 A		400 A		500 A		630 A	
	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P
J1	34	34	34	34	34	34	35	35	35	35	35	35	34	34	34	34
M	120	150	120	150	120	150	160	210	160	210	160	210	210	270	210	270
T	36	36	36	36	36	36	50	50	50	50	50	50	65	65	65	65
C	244	244	244	244	244	244	244	244	244	244	244	244	320	320	320	320
U	20	20	20	20	20	20	25	25	25	25	25	25	32	32	32	45
W	9	9	9	9	9	9	11	11	11	11	11	11	13	13	13	13
CA	10	10	10	10	10	10	15	15	15	15	15	15	20	20	20	20

Preliminary operations

- Check the following upon delivery and after removal of the packaging:
- Packaging and contents are in good condition.
 - The product reference corresponds to the order.
 - Contents should include:
 - Qty 1 x ATyS
 - Qty 1 x Emergency handle and fixing clip
 - Quick Start instruction sheet

Warning


- ⚠ Risk of electrocution, burns or injury to persons and / or damage to equipment.**
- This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.
- This product must always be installed and commissioned by qualified and approved personnel.
 - Maintenance and servicing operations should be performed by trained and authorised personnel.
 - Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
 - Always use an appropriate voltage detection device to confirm the absence of voltage.
 - Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing).
- Failure to observe good engineering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.
- ⚠ Risk of damaging the device
 - In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Accessories


- Bridging bars and connection kits.
- Control voltage transformer (400Vac -> 230Vac).
- DC power supply (12/24Vdc -> 230Vac).
- Mounting spacers to raise the product x 10mm.
- Phase barriers.
- Terminal shrouds.
- Terminal screens.
- Auxiliary contacts (Additional).
- Padlocking in 3 positions (I - 0 - II).
- Lockout accessories (RONIS - EL 11 AP).
- Door escutcheon frame.
- Control relay ATyS C30 + D10 or D20.
- Control relay ATyS C40.

For further details, please refer to the instruction manual in chapter - "Spare parts and accessories"


STEP 6B Manual Operation

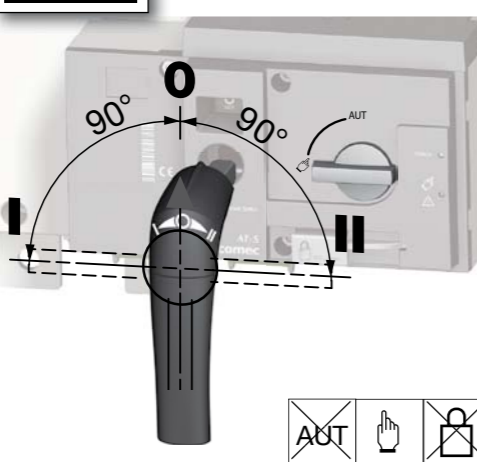

STEP 5 Check

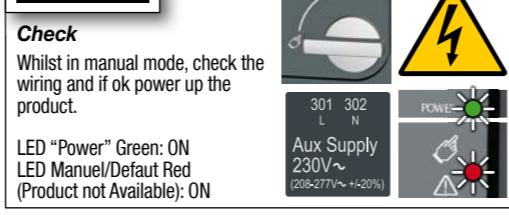

STEP 6A Automatic Operation

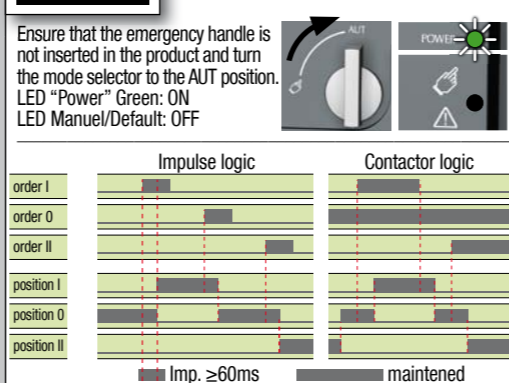


To enable control, close contact 312 with 317.
To force the product to 0 position/OFF bridge the contact 313 with 317.
For contactor logic bridge contact 316 with 317.
To operate: close the contact corresponding to the desired position.

STEP 2 Power Terminal Connections

To be connected using terminal lugs, rigid or flexible busbars.

	FRAME B3			FRAME B4			FRAME B5		
	125 A	160 A	200 A	250 A	315 A	400 A	500 A	630 A	
Minimum cable section Cu (mm ²) at Ith (IEC 60947-1)	35	35	50	95	120	185	2x95	2x120	
Recommended cable section Cu (mm ²) at Ith	-	-	-	-	-	-	2x30x5	2x40x5	
Maximum cable section Cu (mm ²)	50	95	120	150	240	240	2x185	2x300	
Maximum Cu busbar width (mm)	25	25	25	32	32	32	50	50	
Type of screw	M8	M8	M8	M10	M10	M10	M12	M12	
Recommended tightening torque (N.m)	8.3	8.3	8.3	20	20	20	40	40	
Maximum tightening torque (N.m)	13	13	13	26	26	26	45	45	

STEP 3 CONTROL / COMMAND Terminals - Ensure that the product is in Manual Mode.

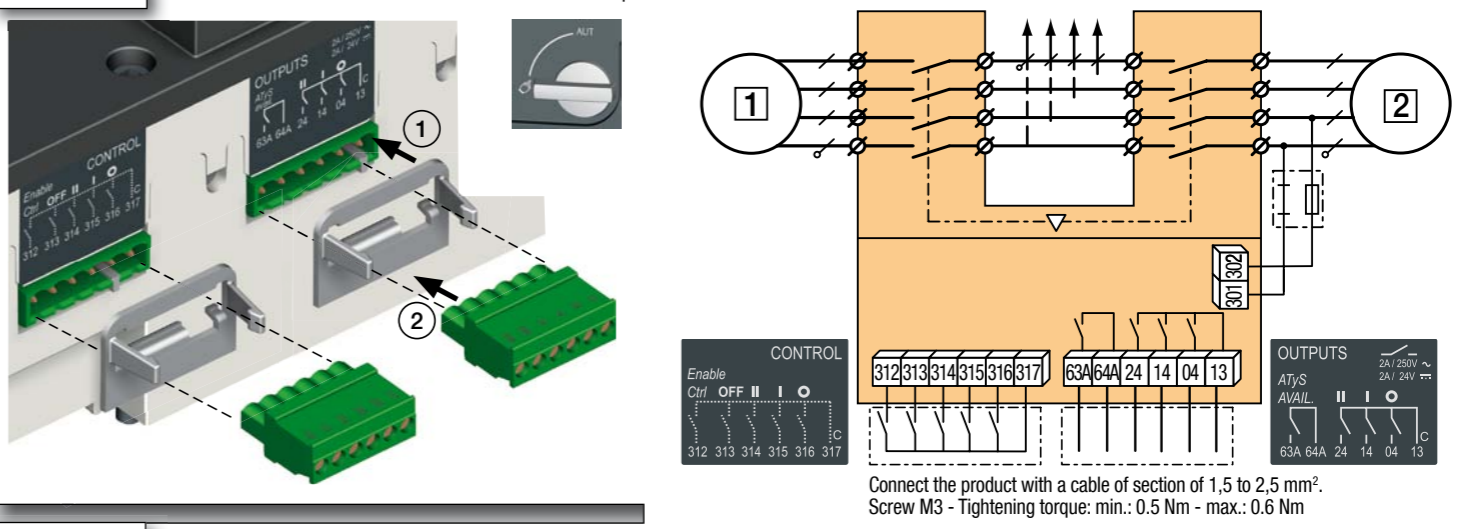

STEP 4 Power Supply Terminal - Remove the Top cover to access and connect the terminal - Replace the cover before putting in service.

